


SAFETY REQUIREMENTS FOR REPAIR OF EXISTING ALUMINIUM SLIDING WINDOWS

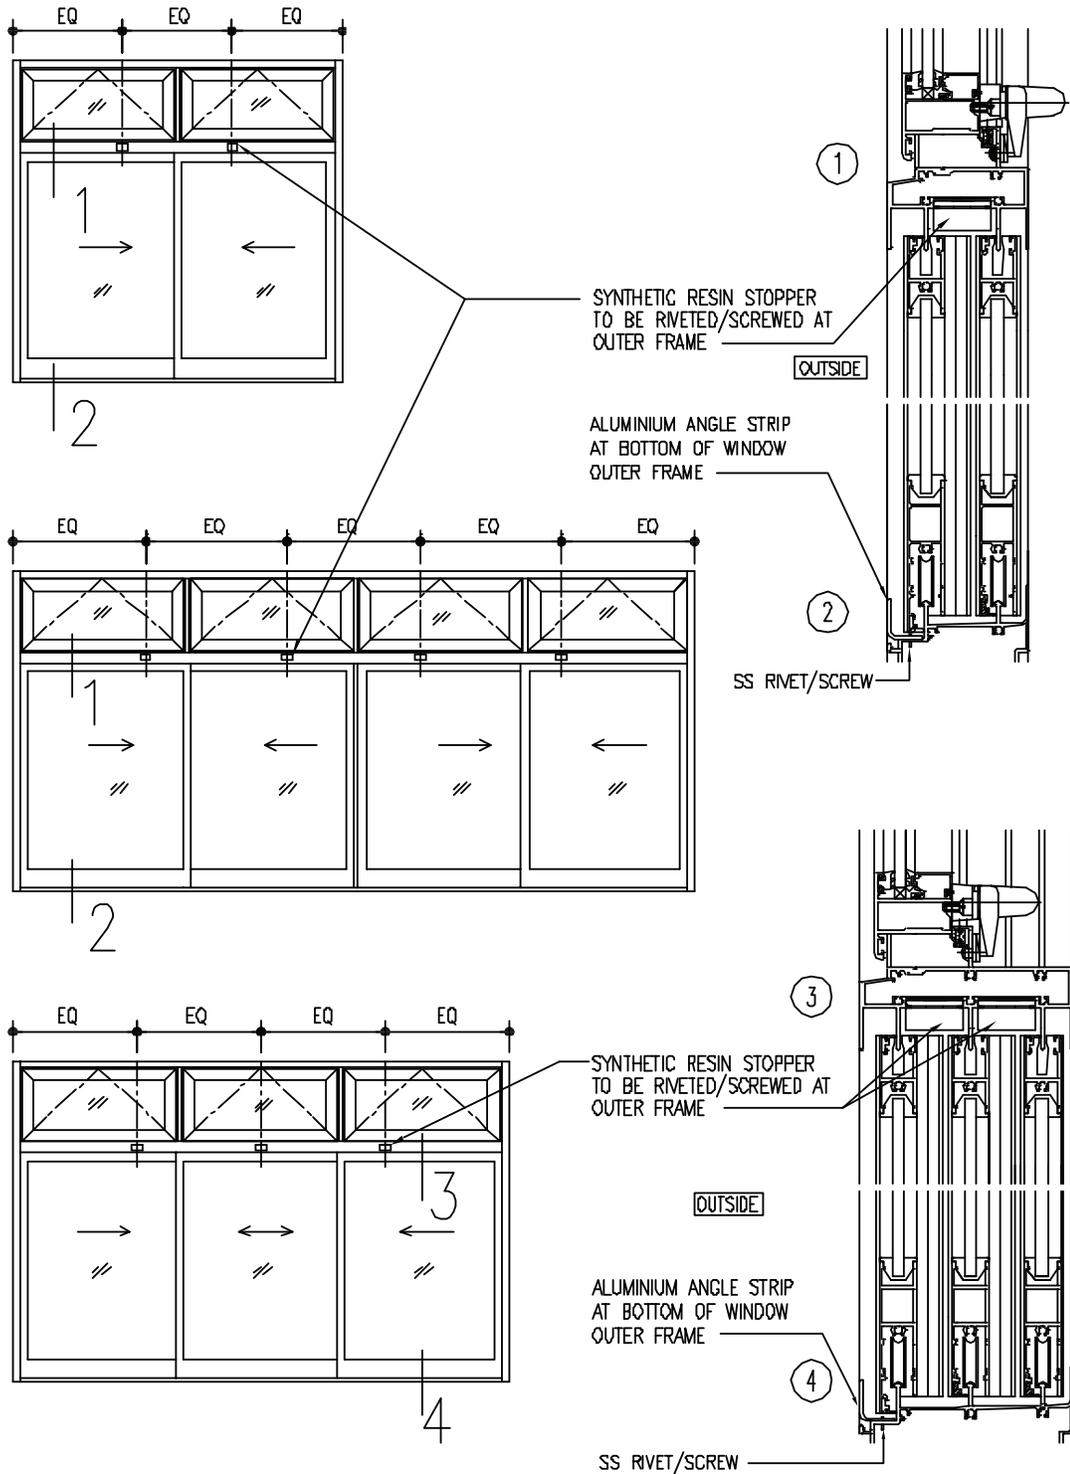

NOTE: INSTALL ONE SAFETY DEVICE:

- SYNTHETIC RESIN STOPPER TO BE RIVETED/SCREWED AT OUTER FRAME
(MINIMUM 1 NOS. PER PANEL WIDTH AND REPEAT THE SAME ALONG THE TRACK)

OR

- ALUMINIUM ANGLE STRIP AT BOTTOM OF WINDOW OUTER FRAME