


For wall, flat owner should not drill any holes within 150mm bandwidth vertically above and below, and 150mm bandwidth horizontally to the left and right of all electrical accessories such as power sockets, lighting switches and heater point.


For more than one accessory mounted together, the bandwidth will increase proportionally.

- \*D = 150mm for 1 number of electrical accessory
- 300mm for 2 numbers of electrical accessories
- 450mm for 3 numbers of electrical accessories

For ceiling, drilling for the mounting of light fittings, rotating fan, etc must not exceed 40mm in depth.

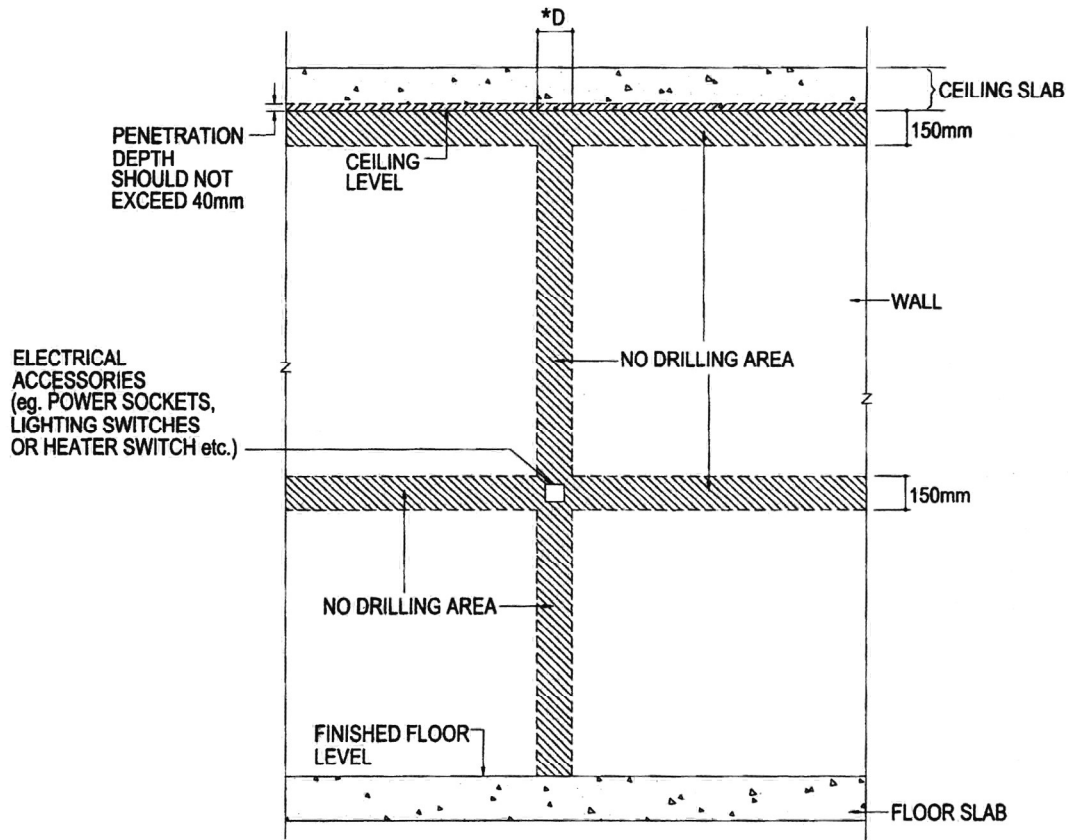

**SECTIONAL VIEW**

|   |  |                         |
|---|--|-------------------------|
|  <p><b>HOUSING &amp; DEVELOPMENT BOARD</b></p> | <p>DRAWING TITLE:<br/><b>DRILLING OF HOLES IN FLATS WITH CONCEALED ELECTRICAL WIRING</b></p> |                         |
| <p>Note: This drawing is served as a guide only</p>   |  | <p>SKETCH DRAWING 1</p> |